

INSTALLATION INSTRUCTIONS

**TAILLIGHT GUARD
07 FORD EXPEDITION
PART NUMBER 31310**

PARTS LIST:

1	Driver Side Taillight Guard
1	Passenger Side Taillight Guard

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Open the rear door and remove the driver's side screws holding the taillight housing (Figure 1).
- Grasp the taillight housing with one hand and pull gently. **NOTE:** Be sure to pull straight back to avoid possible damage. This is the same procedure required to change a burn out taillight in the assembly. For more info see owner's manual on replacing burn taillight bulbs.
- Fit Taillight Guard over the taillight lens. The Side Bracket should hook to the edge of the taillight housing (Figure 2). **NOTE:** If they don't fit properly, they can be adjusted to fit properly using a pair of pliers.
- Return the assembly back to the vehicle making sure that the Taillight Guard is aligned and centered properly on the taillight housing.
- Secure the Taillight Guard assembly using the same factory torx screws (Figure 1).
- Repeat steps 2-6 to install the passenger side.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

(Driver Side Installation Shown)

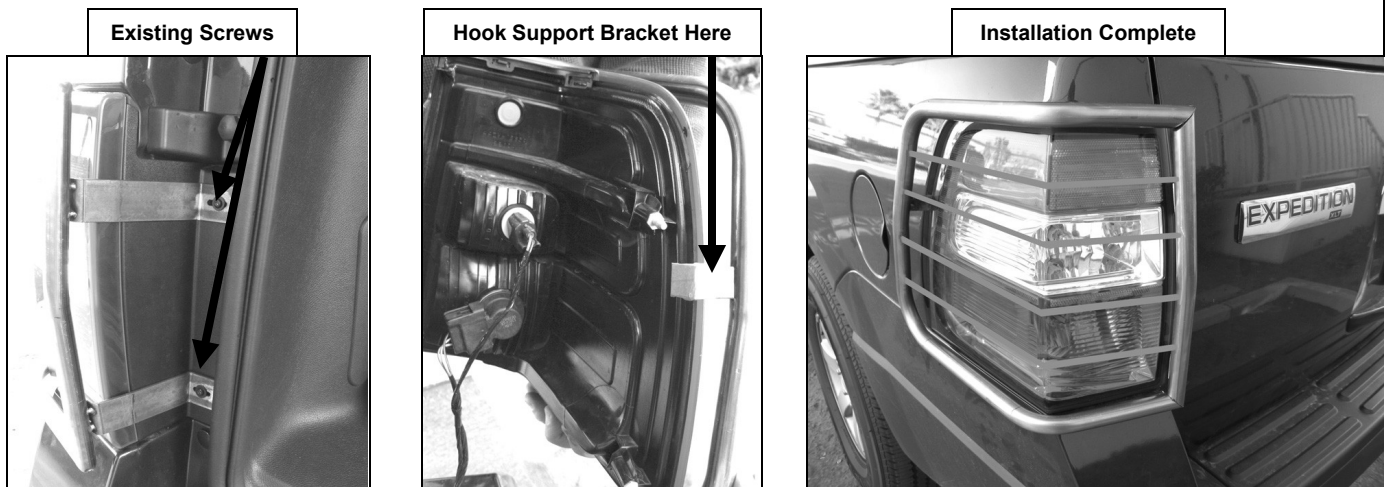


Figure 1

Figure 2

Figure 3