



Installation Instruction

Grille Guard

06-10 Jeep Commander

Part



-
- | | | | | |
|---------|--|------|----|-----------------------|
| • 1 Set | Grille Guard | • 16 | pc | 7/16 Flat Washers |
| • 1 Set | Frame Brackets(left & right,when sitting in the car) | • 2 | pc | 3/8 x 1" Button Bolts |
| • 1 Set | Top Support Brackets | • 2 | pc | 3/8 Flat Washers |
| • 2 pc | 7/16 Double Nut Plate | • 2 | pc | 3/8 Flat Washers |
| • 10 pc | 7/16 x 1-1/4" Hex Bolts | • 2 | pc | 3/8 Nylon Lock Nuts |
| • 6 pc | 7/16 Nylon Lock Nuts | | | |
-

Instructions:

Installing Top Support Brackets


1. Factory hooks must be removed (if equipped) to install the front bar assembly.
2. Open hood and remove the plastic rivets securing the grille. Pull-up-ward and remove the grille tempo Tory from the vehicle.
3. Attach the top support brackets using the existing bolt (Driver side shown). Repeat on passenger side and secure bolts.
4. Reinstall grille assembly.

Installing frame brackets and front bar


5. Attach the 7/16 double nut plate up through the large hole in the steel bumper (Driver side shown). Repeat on passenger side.
6. Attach frame bracket (Driver side shown) to the bottom of the steel bumper using the 7/16 double nut plate, 7/16 x 1-1/4" hex bolts and 7/16 flat washers. Repeat on passenger side.
7. Attach the front bar assembly the inner side if the frame brackets using the 7/16 x 1-1/4" hex bolts, 7/16 flat washers and 7/16 hex nuts. Do not over tighten fasteners; this will help align the front bar. Note the top support bracket will line up with the front bar inner side secure using the 3/8 x 1" button bolts, 3/8 flat washers and 3/8 hex nuts.
8. Align the front bar assembly with the front bumper of the vehicle and tighten all fastens.

DRIVER SIDE SHOWN


STEP-1

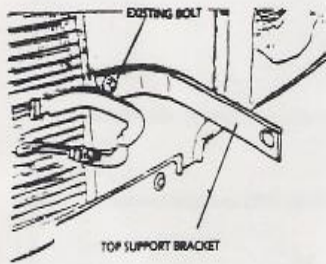


STEP-2

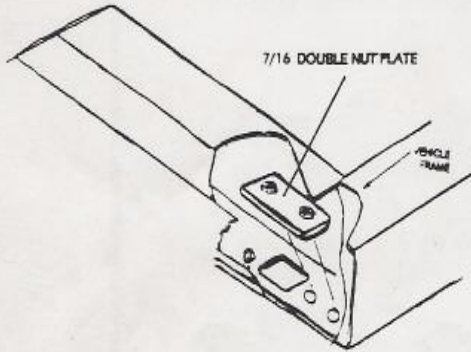

STEP-3

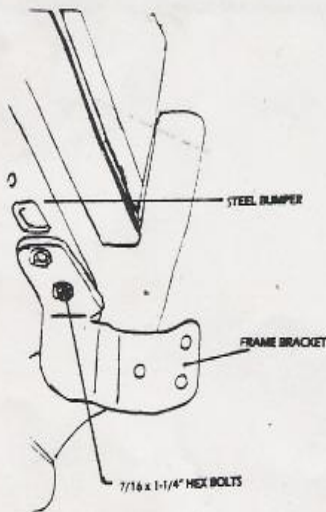

STEP-4

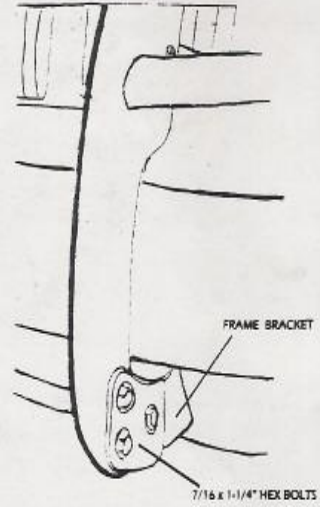

STEP-5

