

INSTALLATION INSTRUCTIONS

BULL BAR

88-00 CHEVROLET/GMC C/K PICK UP, 92-99 SPORT UTILITY

PART NUMBER 70050

PARTS LIST:

1	Bull Bar	8	12-1.75mm x 30mm Hex Bolts
1	Passenger Side Mounting Bracket	8	12mm Hex Nuts
1	Driver Side Mounting Bracket	8	12mm Lock Washers
4	12-1.75mm x 35mm Bolt Plates	16	12mm Flat Washers

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.
2. NOTE: It may be necessary to remove or relocate plate and license plate bracket. It is not required, but strongly recommended.
3. If vehicle is not equipped with tow hooks, please proceed to step 8.
4. From underside of vehicle, remove tow hooks.
5. Hang Mounting Bracket into position by partially threading front existing bolt into existing nut plate. Make sure rear tow hook hole is aligned with nut plate and insert existing rear tow hook bolt (Figure 1). Do not tighten at this time.
6. Attach Bull Bar on the outer side of Mounting Brackets through tow hook opening in lower air dam. Use the included 12-1.75mm x 30mm Hex Bolts, 12mm Flat Washers, 12mm Lock Washers, and 12mm Hex Nut to secure Bull Bar to Mounting Brackets (Figure 1)..
7. Level and adjust Bull Bar; then tighten all hardware at this time.
8. Insert Bolt Plates into front of frame so threaded bolt drops through mounting hole. Attach Mounting Brackets using the included 12mm Hex Nuts, 12mm Flat Washers, and 12mm Lock Washers (Figure 2). Do not tighten at this time.
9. Remove lower air dam and attach Bull Bar on the outer side of Mounting Brackets using the included 12-1.75mm Hex Bolts, 12mm Flat Washers, 12mm Lock Washers, and 12mm Hex Nuts (Figure 2). Do not tighten at this time.
10. Cut air dam where necessary to fit around brackets. Proceed to re-install air dam.
11. Level and adjust Bull Bar; then tighten all hardware at this time.
12. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

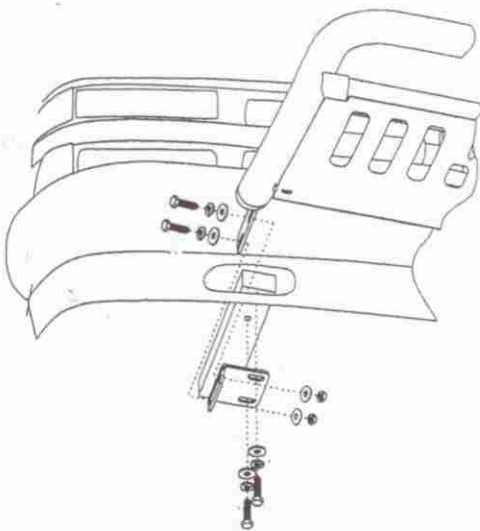


Figure 1

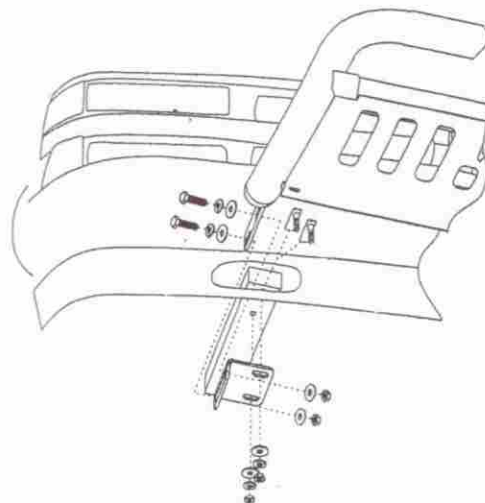


Figure 2