

INSTALLATION INSTRUCTIONS




REAR BUMPER GUARD (Single Tube)

07 JEEP PATRIOT

PART

PARTS LIST:

1	Rear Bumper Guard	4	8-1.25mm x 25mm Hex Head Bolts
1	Driver/Left Frame Bracket	4	8mm Lock Washers
1	Passenger/Right Frame Bracket	4	8mm ID x 22mm OD x 1.5mm Flat Washers
1	Driver/Left Bumper Guard Bracket	4	12-1.75mm x 30mm Hex Head Bolts
1	Passenger/Right Bumper Guard Bracket	4	12-1.75mm x 110mm Hex Head Bolts
		8	12mm Nylock Nuts
		16	12mm ID x 29mm OD x 3mm Flat Washers

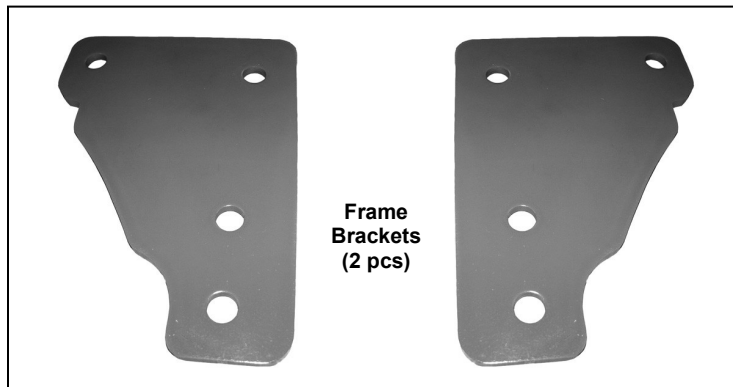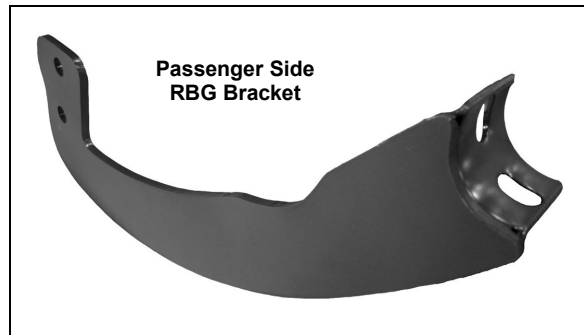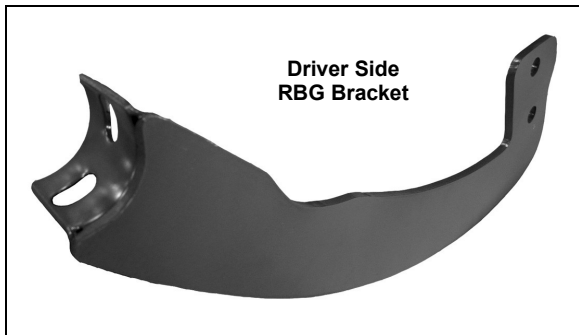

PROCEDURE:



1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. There are two factory holes on each side of frame rail located towards the rear of the vehicle.
3. Partially hang driver and passenger side Frame Brackets to the inner side of frame rails using the included (4) 12mm x 110mm Hex Head Bolts, (4) 12mm Nylock Nuts, and (8) 12mm Flat Washers.
4. Determine driver and passenger RBG Brackets and position them on the inner side of the Frame Brackets. Attach Frame Brackets to RBG Brackets using the included (4) 12mm x 30mm Hex Head Bolts, (4) 12mm Nylock Nuts, and (8) 12mm Flat Washers. **NOTE:** *The Cradles on the RBG Bracket should be facing the outside of vehicle.*
5. Position Rear Bumper Guard onto RBG Brackets and attach them using the included (4) 8mm x 25mm Hex Head Bolts, (4) 8mm Lock Washers, and (4) 8mm Flat Washers.
6. Level and adjust Rear Bumper Guard, and then tighten all hardware at this time.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.



For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

(Driver Side Mounting Brackets Shown)

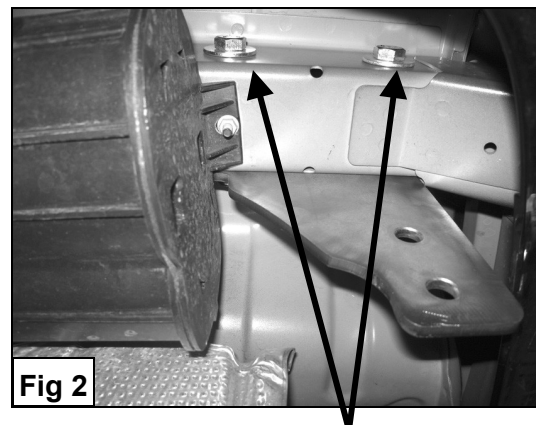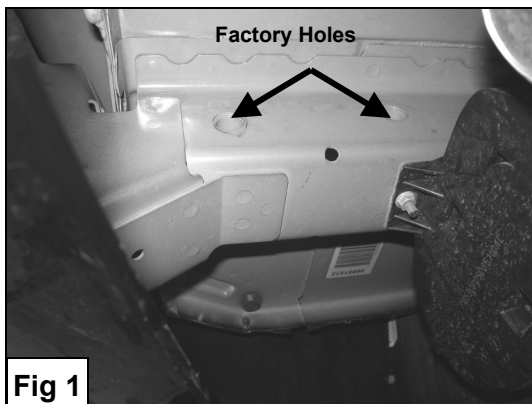

12mm x 110mm Hex Bolts
12mm Nylock Nuts
12mm Flat Washers

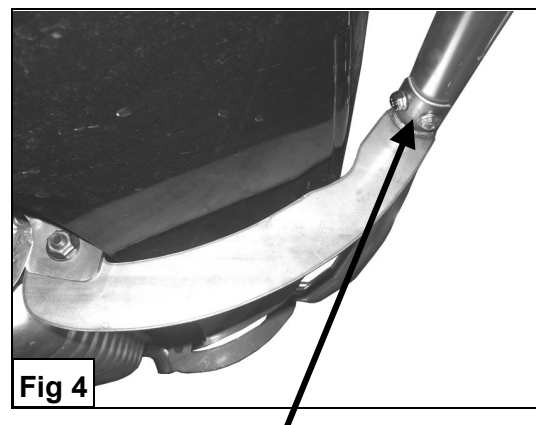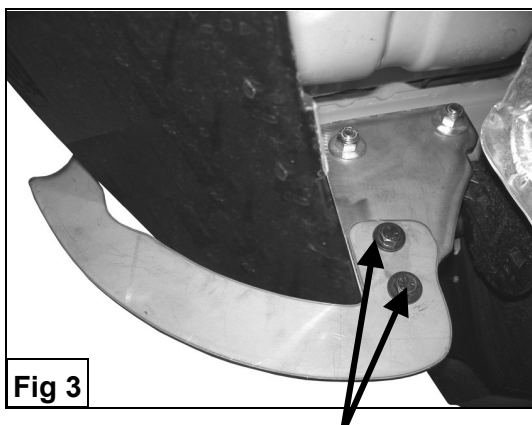

**12mm x 30mm Hex Bolts
12mm Nylock Nuts
12mm Flat Washers**

**8mm x 25mm Hex Bolts
8mm Lock Washers
8mm Flat Washers**