

# INSTALLATION INSTRUCTIONS

## REAR BUMPER GUARD

### 97-04 MITSUBISHI MONTERO


#### PART NUMBER

#### PARTS LIST:


1	Rear Bumper Guard
4	12-1.75mm x 120mm Hex Head Bolts
4	12mm Nylock Nuts
8	12mm ID x 27mm OD x 3mm Flat Washers

#### PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Remove the factory tow hooks from vehicle.
3. With help position Rear Bumper Guard onto vehicle. Align holes on the Rear Bumper Guard with holes on the frame.
4. Place tow hooks over the Mounting Brackets on the Rear Bumper Guard and secure them to frame using the included (4) 12mm x 120mm Hex Head Bolts, (4) 12mm Nylock Nuts, and (8) 12mm Flat Washers. Do not tighten at this time.
5. Center Rear Bumper Guard; then tighten all bolts at this time.
6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

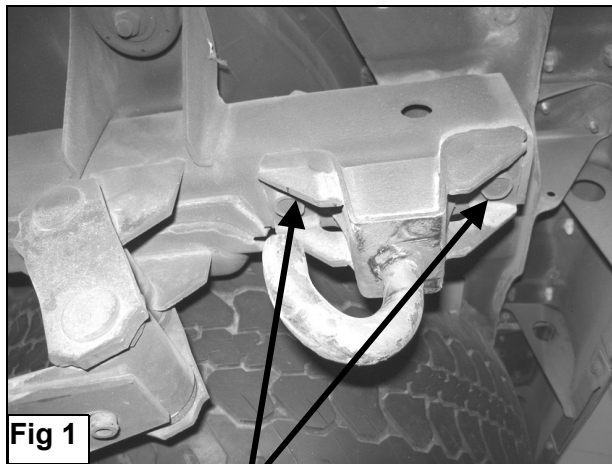

Remove thee factory tow hook bolts

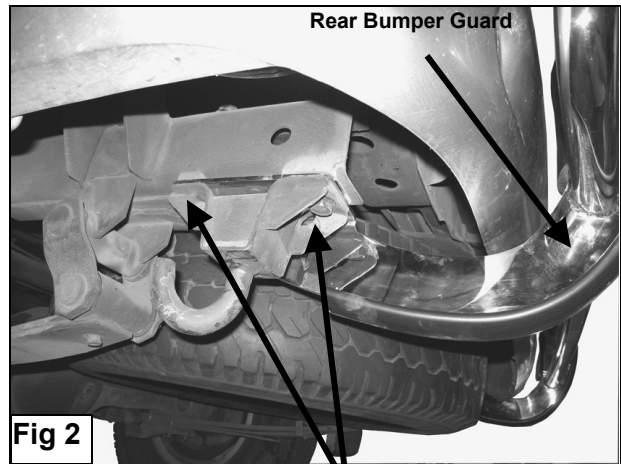

- 12mm x 120mm Hex Head Bolts  
- 12mm Nylock Nuts  
- 12mm Flat Washers

**Fig 3**